


Aansluitklemmen grondprint MD300 brandcentrale

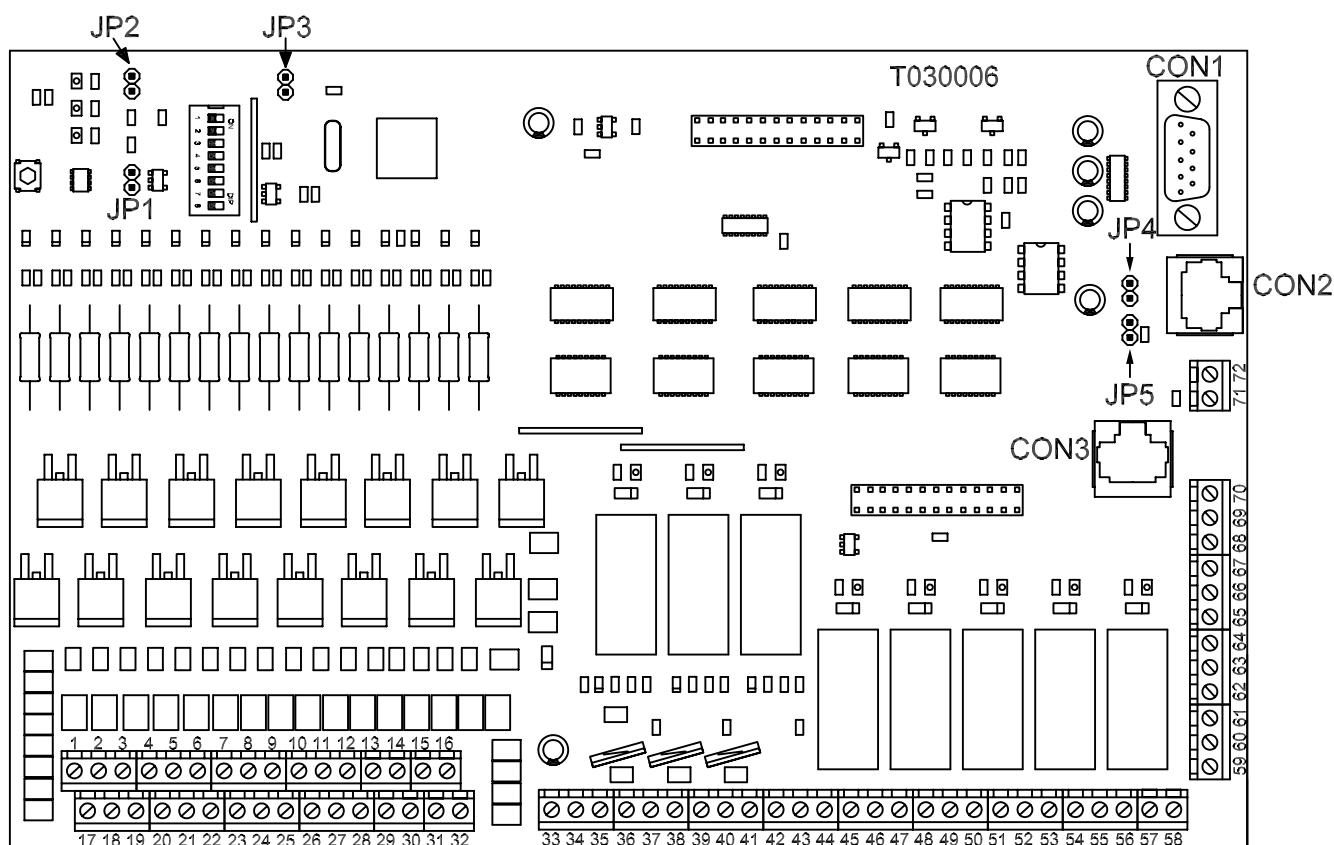

KLEMMEN	UITLEG
1	+ LUS 1
2	- LUS 1
3	+ LUS 3
4	- LUS 3
5	+ LUS 5
6	- LUS 5
7	+ LUS 7
8	- LUS 7
9	+ LUS 9
10	- LUS 9
11	+ LUS 11
12	- LUS 11
13	+ LUS 13
14	- LUS 13
15	+ LUS 15
16	- LUS 15
17	+ LUS 2
18	- LUS 2
19	+ LUS 4
20	- LUS 4
21	+ LUS 6
22	- LUS 6
23	+ LUS 8
24	- LUS 8
25	+ LUS 10
26	- LUS 10
27	+ LUS 12
28	- LUS 12
29	+ LUS 14
30	- LUS 14
31	+ LUS 16
32	- LUS 16

KLEMMEN	UITLEG
33	+ 24V IN
34	0V IN
35	- beveiligde sirenekring 1
36	+ beveiligde sirenekring 1
37	- beveiligde sirenekring 2
38	+ beveiligde sirenekring 2
39	- beveiligde sirenekring 3
40	+ beveiligde sirenekring 3
41	N.C. relais 4 - A
42	C. relais 4 - A
43	N.O. relais 4 - A
44	N.C. relais 4 - B
45	C. relais 4 - B
46	N.O. relais 4 - B
47	N.C. relais 5 - A
48	C. relais 5 - A
49	N.O. relais 5 - A
50	N.C. relais 5 - B
51	C. relais 5 - B
52	N.O. relais 5 - B
53	N.C. relais 6 - A
54	C. relais 6 - A
55	N.O. relais 6 - A
56	N.C. relais 6 - B
57	C. relais 6 - B
58	N.O. relais 6 - B
59	N.C. relais 7 - A
60	C. relais 7 - A
61	N.O. relais 7 - A
62	N.C. relais 7 - B
63	C. relais 7 - B
64	N.O. relais 7 - B

KLEMMEN	UITLEG
65	N.C. relais 8 - A (*) FAIL-SAFE RELAIS
66	C. relais 8 - A (*)
67	N.O. relais 8 - A (*)
68	N.C. relais 8 - B (*)
69	C. relais 8 - B (*)
70	N.O. relais 8 - B (*)
71	+ 5V DC IN
72	0V DC IN

JP1 : altijd gesloten
 JP2 : fabrieksinstelling
 JP3 : calibratie touch-screen
 JP4 : afsluitweerstand Rx = altijd open
 JP5 : afsluitweerstand Tx = altijd open

CON1 : PC-config
 CON2 : I/O Bus
 CON3 : Not used