





Series 65 Mounting Base
Part No. 45681-200

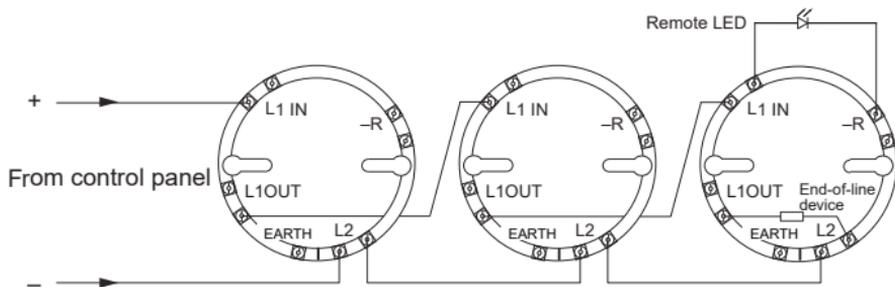

Wiring diagram of monitored Series 65 zone

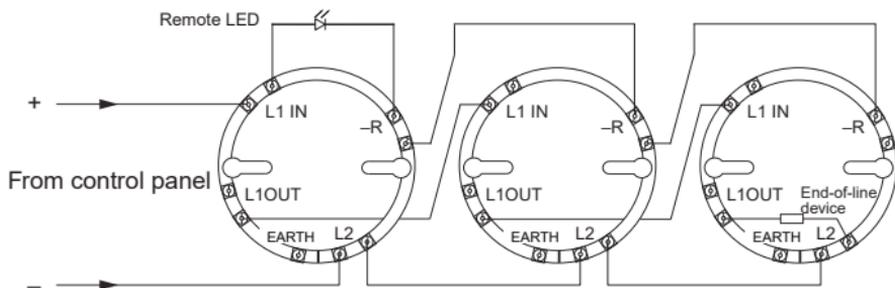

Wiring diagram of monitored Series 65 zone with common remote indicator

*Note: L1 must be connected to positive line if a remote indicator is connected.
An 'EARTH' terminal is provided for zone wiring continuity.*

© Copyright Apollo Fire Detectors Limited 2012

Apollo Fire Detectors Limited, 36 Brookside Road, Havant, Hants, PO9 1JR, UK

Tel: +44 (0) 23 9249 2412 Fax: +44 (0) 23 9249 2754

Email: techsalesemails@apollo-fire.com Website: www.apollo-fire.co.uk