

USER MANUAL



MD300 fire detection control panel Brief operation

01-07-2013

LIMOTEC byba

Bosstraat 21

B - 8570 Vichte


Tel +32 (0) 56 650 660

www.limotec.be





BRIEF OPERATION OF MD300 CONTROL PANEL

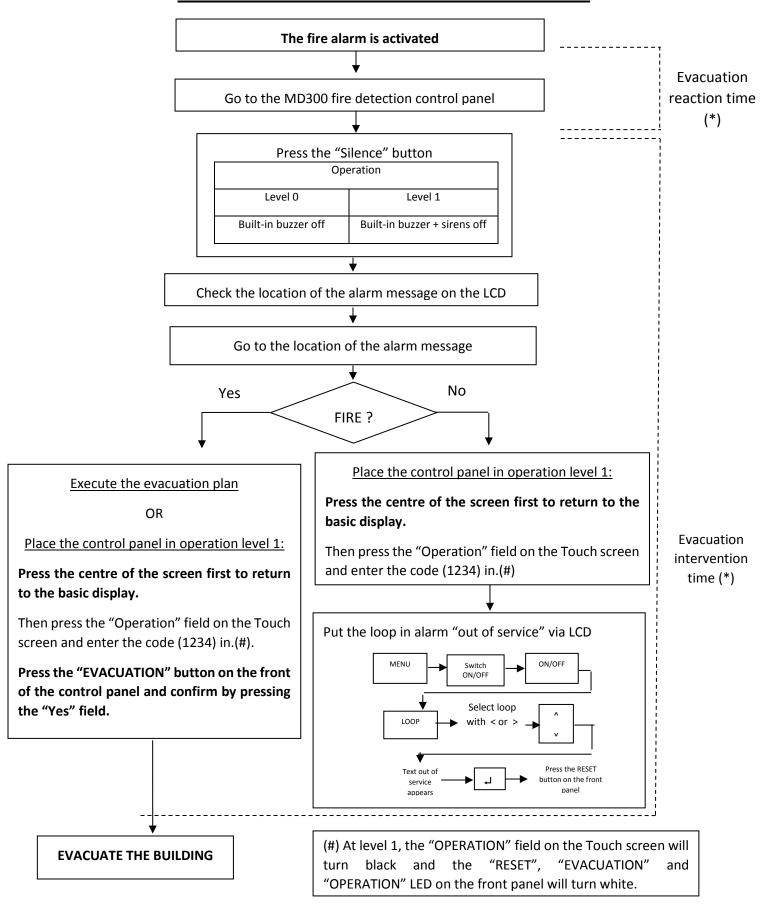



BASIS SCREEN ALARM SCREEN 13 oktober 09 1/3 **ALARM** 10:15 Lus 1 **ALARM** 3/3 MD300 brandmeldcentrale Press here to Lus 15 return to basic **IN BEDRIJF** display VOLGENDE **VORIGE** BEDIENING MENU Switching from level Scrolling between the Selection button 0 to level 1 for menu overview different alarms. SILENCE button Touch screen **RESET** button RESET ALCEMENE STORING EVACUATIE VERTRAACO ALCEMEEN UIT DIENST IN BEDRUP Led indicators **EVACUATION**

TIME DELAYS:

Evacuation – reaction	This is the time between the alarm message on the control panel and the
time:	acceptance of the alarm by means of the "Silence" button on the operating
(1-9 minutes)	front of the MD300 control panel. If the alarm was not accepted after the reaction time has elapsed, the evacuation procedure starts.
Evacuation – intervention	This is the time from the acceptance of the alarm by means of the "Silence"
time:	button on the operating front of the MD300 control panel. If the alarm wa
(1-9 minutes)	not accepted after the intervention time, the evacuation procedure starts.
	Restart the intervention time by pressing the "Silence" button on the
	operating front of the control panel.
Battery error:	"Silence" does not affect the delay time
The second secon	
10 minutes delayed	"Reset" restarts the delay time
Mains voltage fault:	This is immediately reported in the control panel's logbook
30 minutes delayed	"Silence" does not affect the delay time
	"Reset" restarts the delay time

(*): Contact your installer for the correct setting of the time delays.